

How to Use Your Digital Recorder

Hold Switch

This feature turns the digital recorder on and off.

Divide

You can divide a recording into two parts and a new number is added to the newer part of the divided recording.

Play/Enter

After selecting the recording you'd like to hear, press the "play" button.

Rewind

Rewinds in short increments making it easier to locate a segment in a long recording for review.

Recording Number

In this picture, the user is on the seventh recording out of the 77 total recordings in file A.

Menu

Provides the ability to organize recordings in "files." By pressing this button the folder changes from A to B, C, D, and E in the upper left hand corner. These files can be used to separate recordings for each class. (e.g. A=Math, B=English, etc.)

Record/Pause

Provides the ability to pause the recording once started if your class takes a break and continue recording in one easy step.

Fast Forward

Fast forwards in short increments making it easier to locate a segment in a long recording for review.

Stop

Press the "stop" button to end a recording or to stop a recording during playback.

Microphone Jack

Provides the ability to use an external microphone.

Earphone Jack

A listening device can be plugged into the recorder.

Erase

Hold the erase button down until it beeps. Then press it one more time to delete the selected recording.

Volume

Press the volume button up or down depending on whether you would like to increase or decrease the volume.

A-B Repeat

Mark the beginning and ending of a particular recorded passage and the recording will be played over and over again (great for learning a language!)

